

Honeywell The power of connected Access Control Solutions

WIN-PAK [®] 4.7			Best Value for Future Expansion!
Quick Reference Guide	WIN-PAK XE Express Edition	WIN-PAK SE Standard Edition	WIN-PAK PE Professional Edition
PART NUMBERS	WPX47	WPS47	WPP47
INCLUDED MODULES			
Access Control	\checkmark	\checkmark	\checkmark
Advanced Video Surveillance		\checkmark	\checkmark
Intrusion and Fire ¹		\checkmark	\checkmark
FEATURES			
Communication Servers	1	1	Unrestricted
Accounts	1	1	5
User Licenses/Workstations	1	5	Unrestricted
Integrated HON-FIN4000 biometric reader/controller support	0	32	600
Manage, track and restrict access by badgeholder, schedule and space	\checkmark	\checkmark	\checkmark
HID Mobile Access [®] integration	\checkmark	\checkmark	\checkmark
Prioritized alarm view and floor plan links	\checkmark	\checkmark	\checkmark
Create and manage photo ID badges	\checkmark	\checkmark	\checkmark
Customize, schedule and automatically email reports	\checkmark	\checkmark	\checkmark
Customize and receive via email or SMS notifications by event type	\checkmark	\checkmark	\checkmark
Change/deactivate card based on lack of use (use it or lose it)	\checkmark	\checkmark	\checkmark
Different card types: VIP, Supervisor, Standard and Limited Use ²	\checkmark	\checkmark	\checkmark
Elevator control	\checkmark	\checkmark	\checkmark
WIN-PAK Application Protocol Interface (API)	\checkmark	\checkmark	\checkmark
Multi language support (Spanish, French, Portuguese and more)	\checkmark	\checkmark	\checkmark
Integrate video and access system events for video verification		\checkmark	\checkmark
People masking configuration requiring 4-eye permission		\checkmark	\checkmark
Extract and save video clips		\checkmark	\checkmark
Floor plan integration of access and video		\checkmark	\checkmark
Arm and disarm intrusion system through a valid access card read		\checkmark	\checkmark
Require a supervisor to present a card to arm/disarm ² – normal cards are not allowed entry while intrusion is armed		✓	✓
Monitor intrusion and fire ¹ events with video integration or video confirmation		✓	✓
See the status of the intrusion and fire ¹ systems and have basic control via the virtual keypad		✓	\checkmark
Select up to four cameras to automatically display per event type		✓	✓
Define PTZ presets per event type		\checkmark	\checkmark
Select instant or intensive pre-defined record rates		\checkmark	\checkmark
Program custom record rates		\checkmark	✓
Definable go to home delay – record event for defined time and then define when the camera returns to the home position		✓	\checkmark
Define if manual PTZ is allowed during event		\checkmark	✓
Enhanced Time and Attendance web-based Report Module			✓
ADDED FUNCTIONALITY – Easily upgrade to add new functionality as your nee	ds expand. Below are upgrac	les to features only. ³	
Upgrade to WIN-PAK SE	UX47S47		
Upgrade to WIN-PAK PE	UX47P47	US47P47	
SOFTWARE MAINTENANCE UPGRADE (SMU) PROGRAM - Get the latest soft	ware releas <u>es, service packs</u>	and patches.	
Annual SMU Subscription	SMUWPXE	SMUWPS	SMUWPP

¹VISTA-128FBPT or VISTA-250FBPT required

²NetAXS[®] required

³Upgrades from older versions to current version are via SMU