

Mini-type Learning Remote Controller

RM-L7




Thanks for using this Remote Control (hereafter known as RM-L7). You must follow the instructions below and format this Remote Control before you can use the same to control your home electric appliances. Please retain this instruction manual for future use.

Introduction


RM-L7 is a mini-type learning remote control which copies functions from your original home electric appliance remote controls of different types and different brands. This is a very simple remote control after formatting for your basic usage.

Panel Instruction

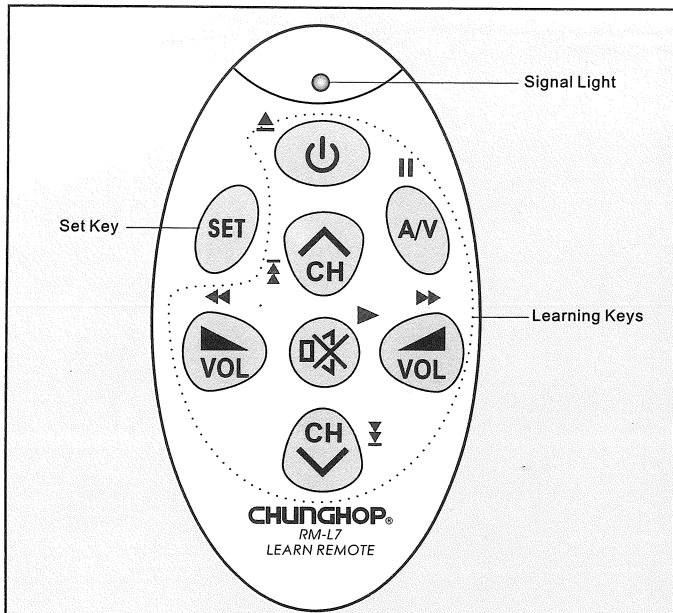

Battery Installation

Remove the battery compartment cover. Insert two new AAA batteries (not included with RM-L7) into the battery compartment. Connect the positive "+" and the negative "-" nodes of the batteries to the corresponding nodes in the battery compartment. See Diagram below:

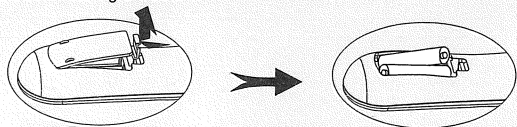

Warm Tips:



- New and old batteries should not be used together. Batteries of different sizes should not be used together;
- If battery leakage occurs, you must remove the batteries and clean the battery compartment before inserting new batteries;
- Please remove the batteries from the battery compartment if RM-L7 is not used for a long period of time;
- There is no need to re-set this remote control after the batteries' replacement.

Learning Setting Steps

After easy setting RM-L7 by below steps, you can use it to control your home electric appliance easily.


Step 1:

Press "SET" button and hold it, then press "⏻". Release both buttons until the signal light is flashing, to enter the learning state.




Step 2:

Press the first button you'd like to learn. For example, press the "A/V" button on RM-L7 once. The signal light is on.

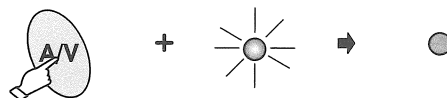

Step 3:

Point the emitter of RM-L7 directly to the emitter of your original remote (note: please keep a distance from 3-5cm), press corresponding button (TV/AV) on your original remote. The signal light on RM-L7 starts flashing again, means the button is successfully learnt. (Note: some other buttons on the original remote are also ok. Button symbols on RM-L7 is just for a more rememberable and convenient usage.)

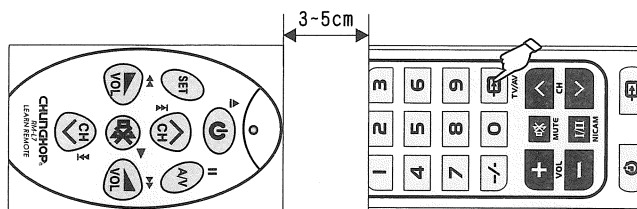

Step 4:

Repeat the steps 2-3 to learn other function buttons. Press "SET" button to finish the setting, and the signal light is off.



Note:

Automatic exit is available after 15 seconds if there's no learning.

After setting up RM-L7 by above steps, you can remotely control your home electric appliance conveniently with this remote.

After Service

During the usage of the remote controller, in case any problem occurs or remote controller fails, please contact us promptly and we'll do our utmost to serve you. However, random dismantling or repair of the remote controller is not allowed and we'll not bear responsibility for the remote controller that has been subject to random dismantling.

※ This company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.